


# Mold Identifying SMART CAPS

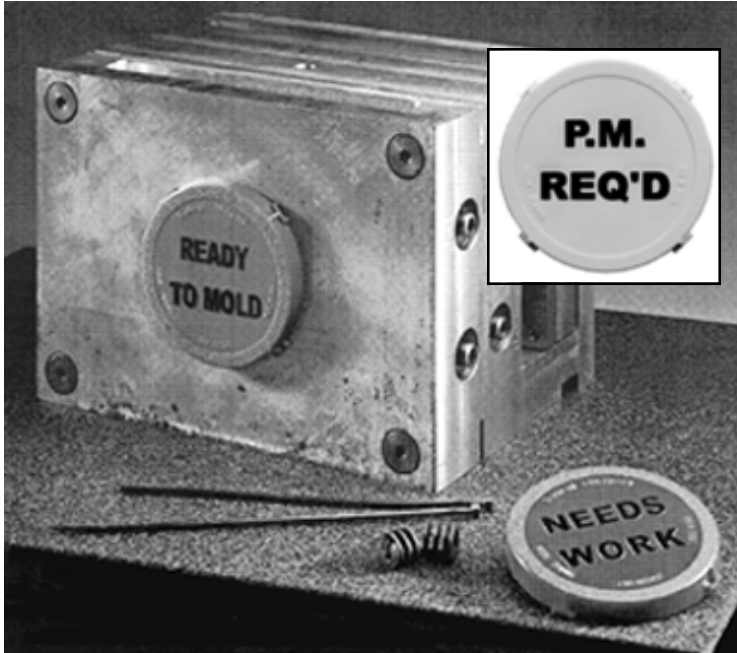

## Snap onto Locating Ring to Indicate Status of Mold

- Prevents press setup with mold that is not ready.
- Prevents mold repair delays due to poor communication.


When repair, revision or engineering change is needed, molding room puts note or work order under **Red NEEDS WORK cap** and snaps it onto mold locating ring.

When standard preventive maintenance is needed, molding room puts note or work order under **Yellow P.M. REQ'D cap** and snaps it onto mold locating ring.

When work is done, tool room signs off on note or work order, puts it under **Green READY TO MOLD cap** and snaps it onto mold locating ring.

Part No.	Description	Price	
		1 to 24	25 +
GREENCAP	Green READY TO MOLD Smart Cap	\$1.85	\$1.75
REDCAP	Red NEEDS WORK Smart Cap		
YELLOWCAP	Yellow P.M. REQ'D Smart Cap		

## Typical End-of-Run WorkFlow with Smart Caps

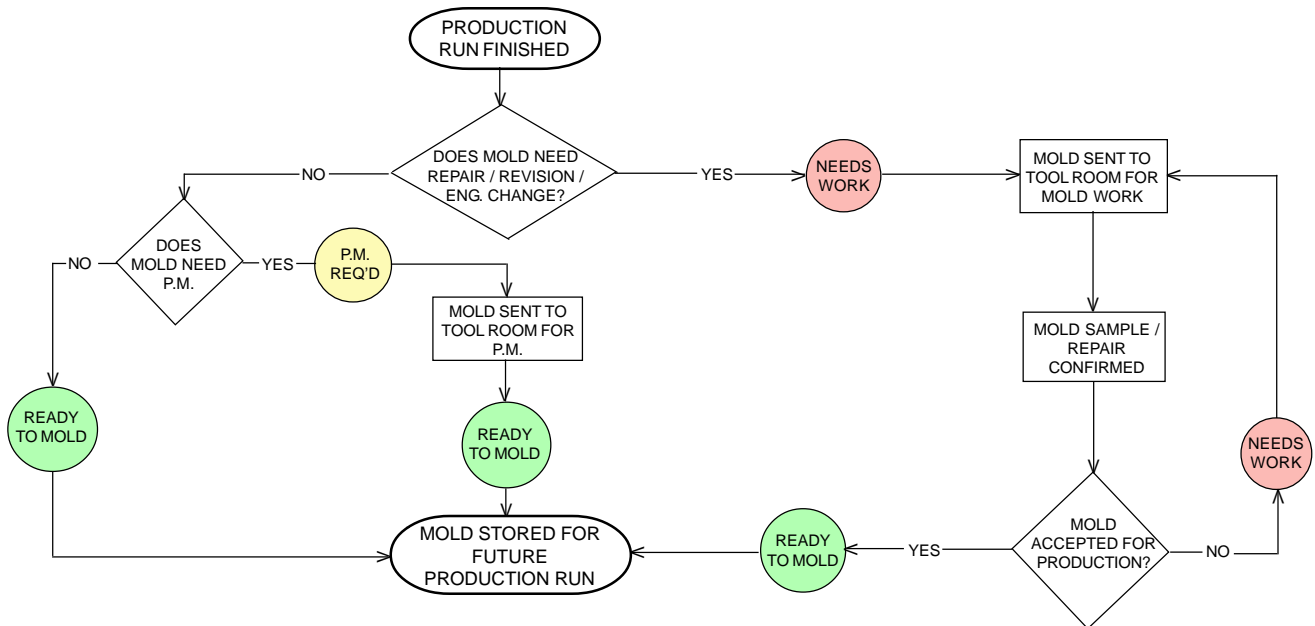

© 2018 MOLDERS CHOICE, Inc.



24 Hour Service - 7 Days a week  
**1-800-809-4623**  
 WebSite: [www.molderschoice.com](http://www.molderschoice.com) • Email: [molders@molderschoice.com](mailto:molders@molderschoice.com)